


M E L
B Y
E


Simon Gullberg
Product and solution Manager




November 2025 Installation Manual

Collision Protection Double and Singel

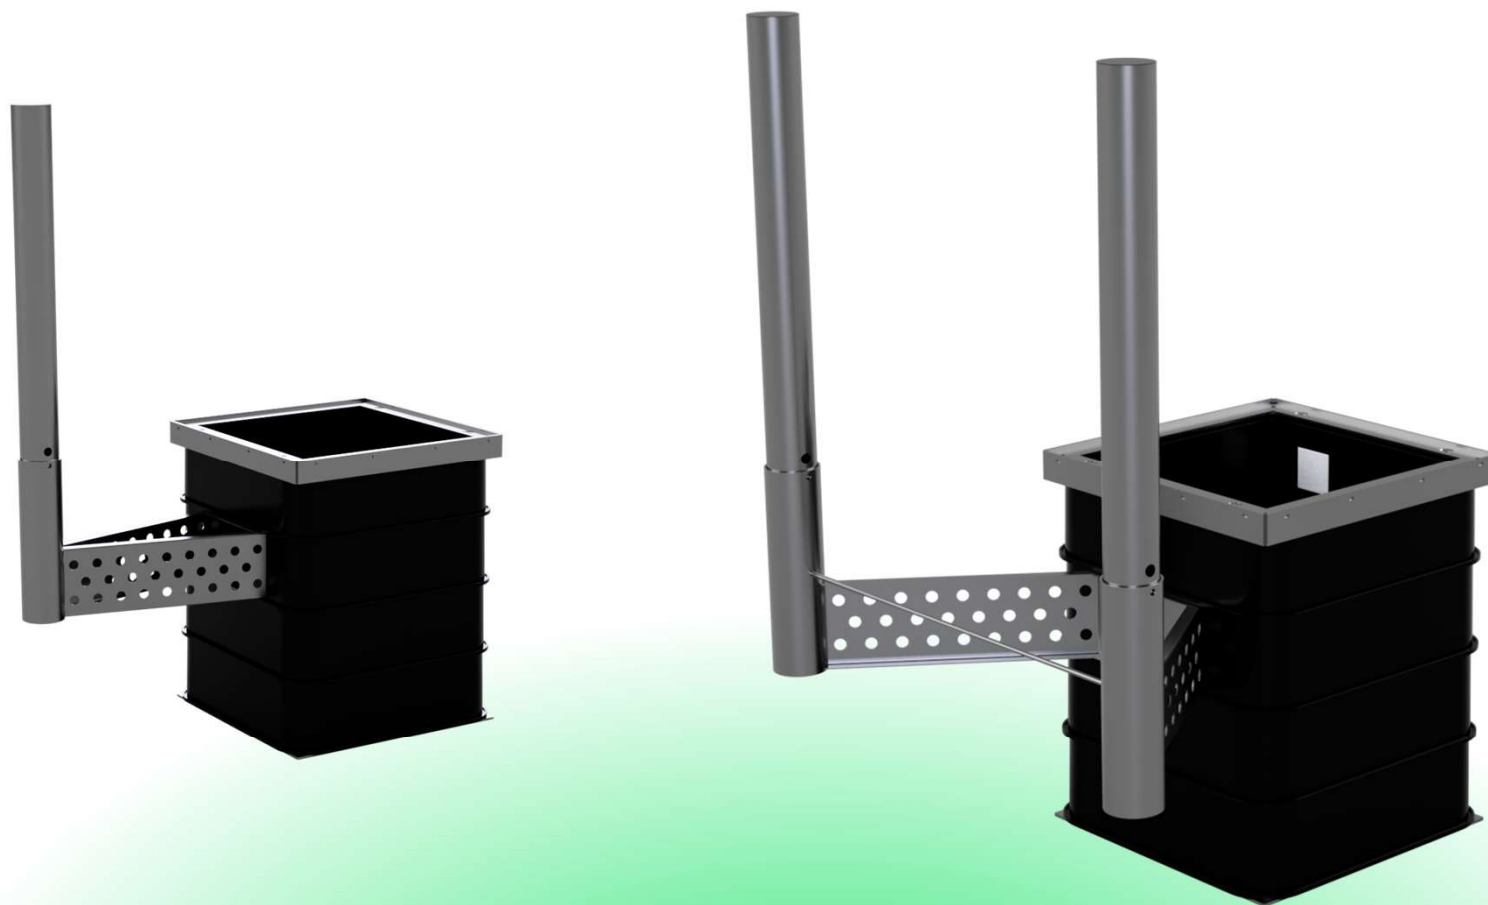

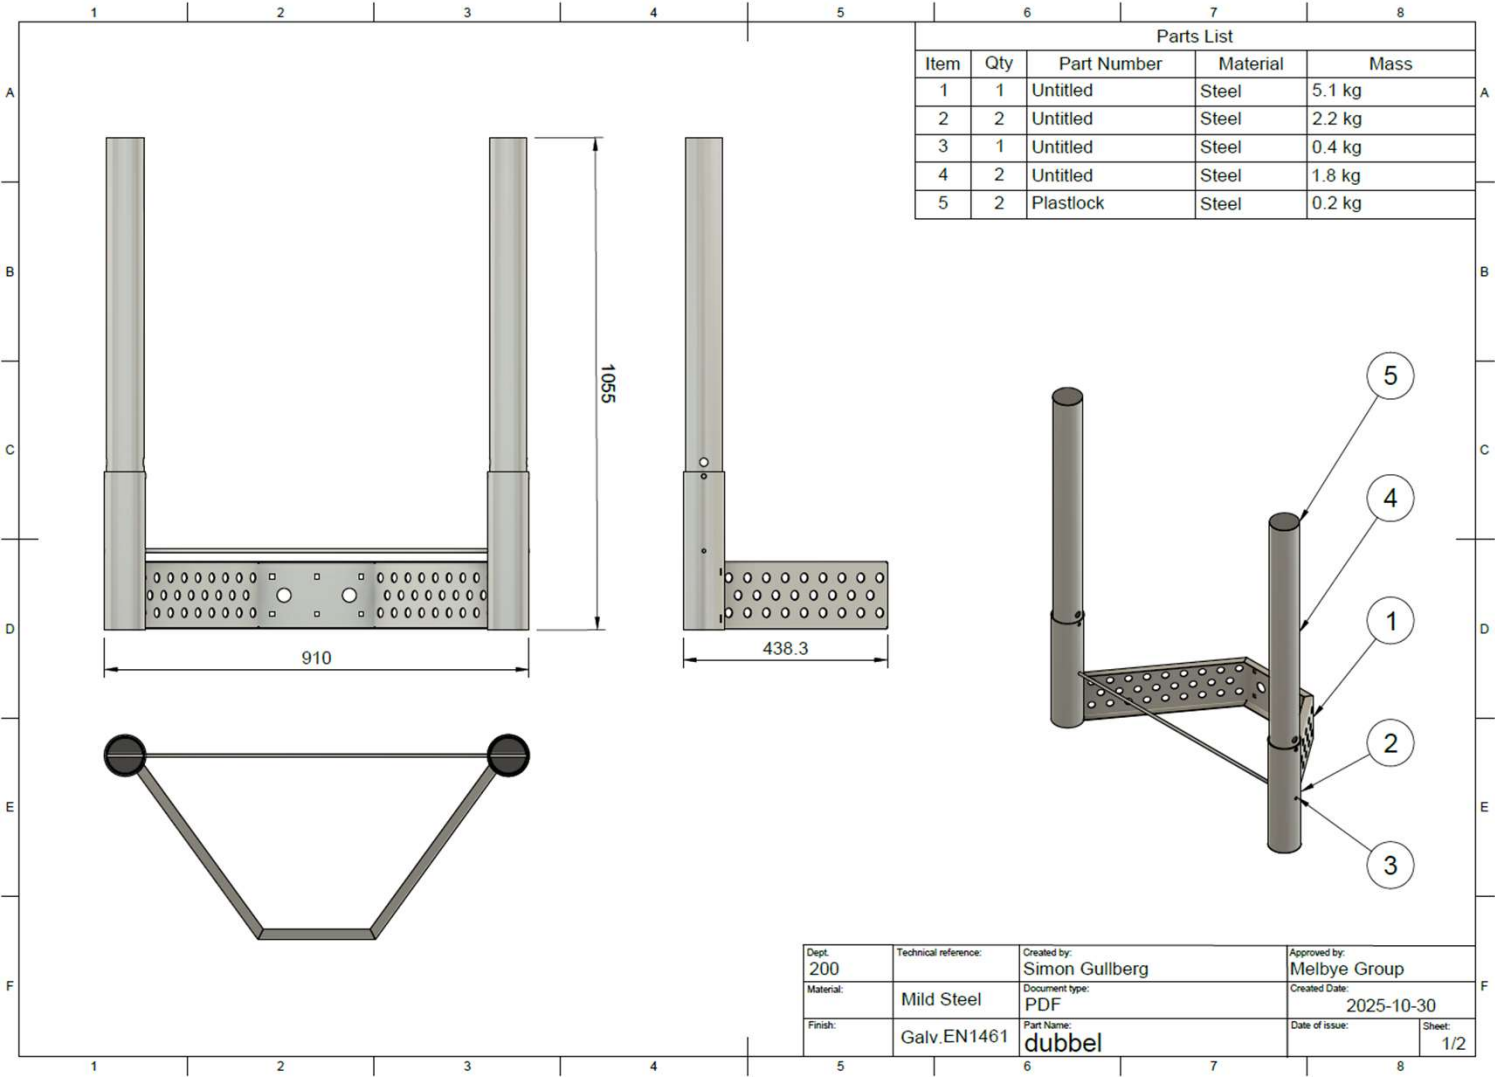

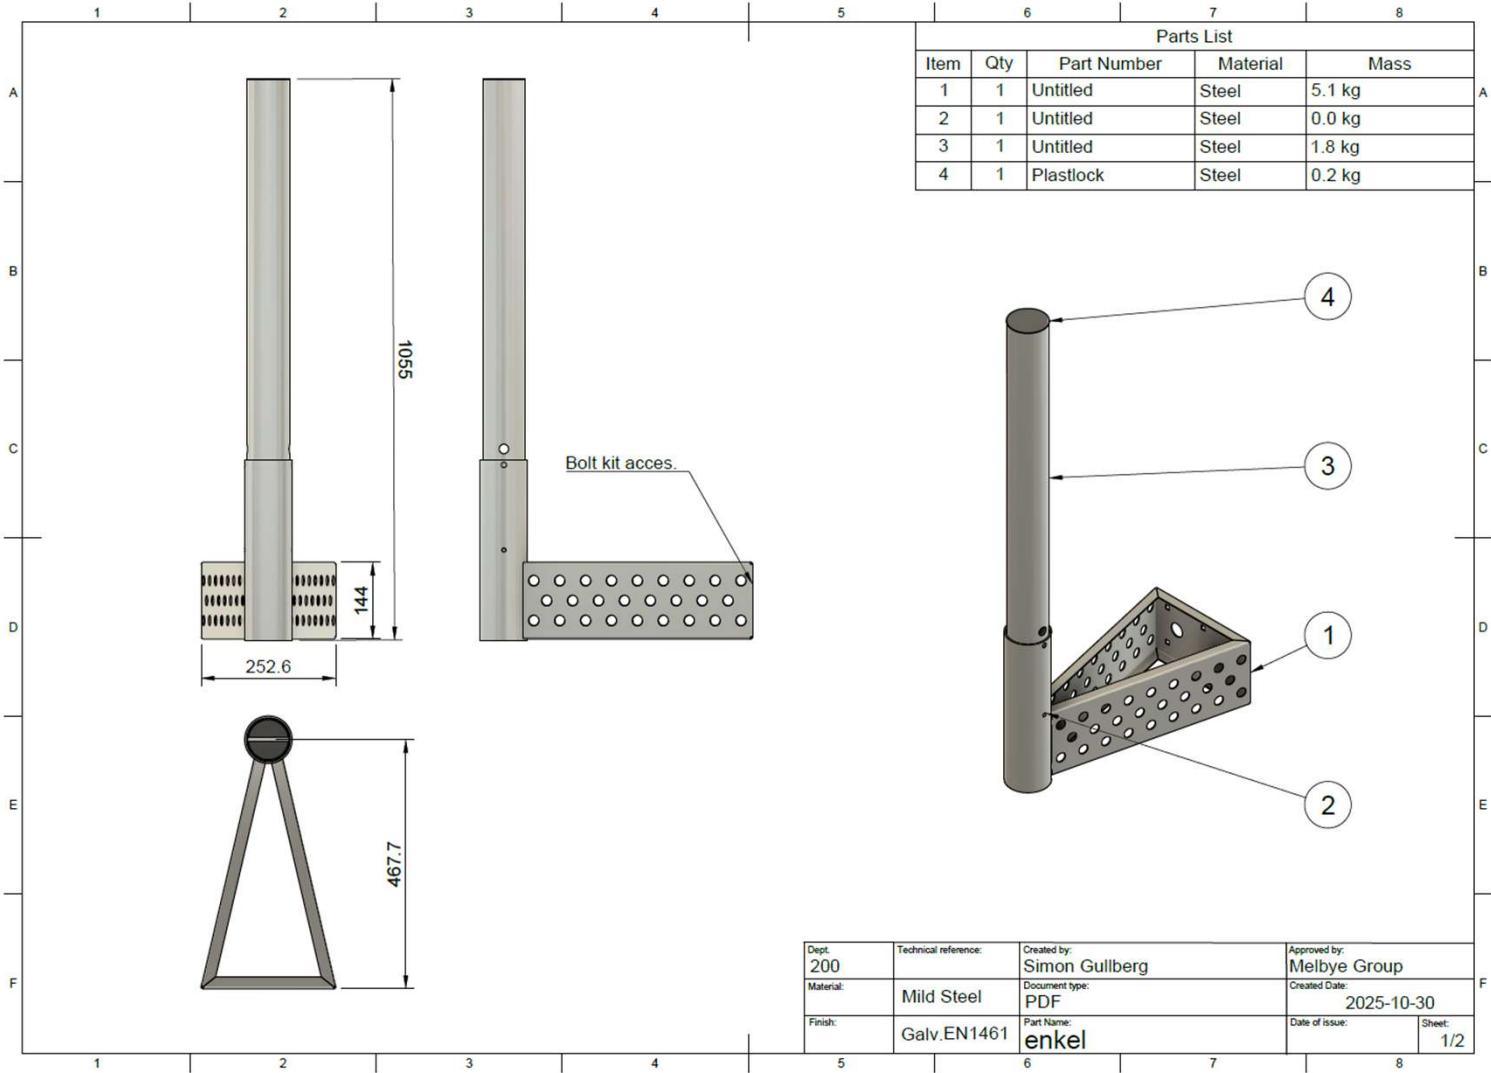


- Included: 6pcs Carriage Bolts with Flange nut
- On site tools: 10mm drill bit
- On site tools: 15mm socket
- On site tools: Drilling machine




→ **Step 1:** Place drilling templet on 2nd section from top


→ **Step 2:** Use 10mm drill and make 6 holes for bolts

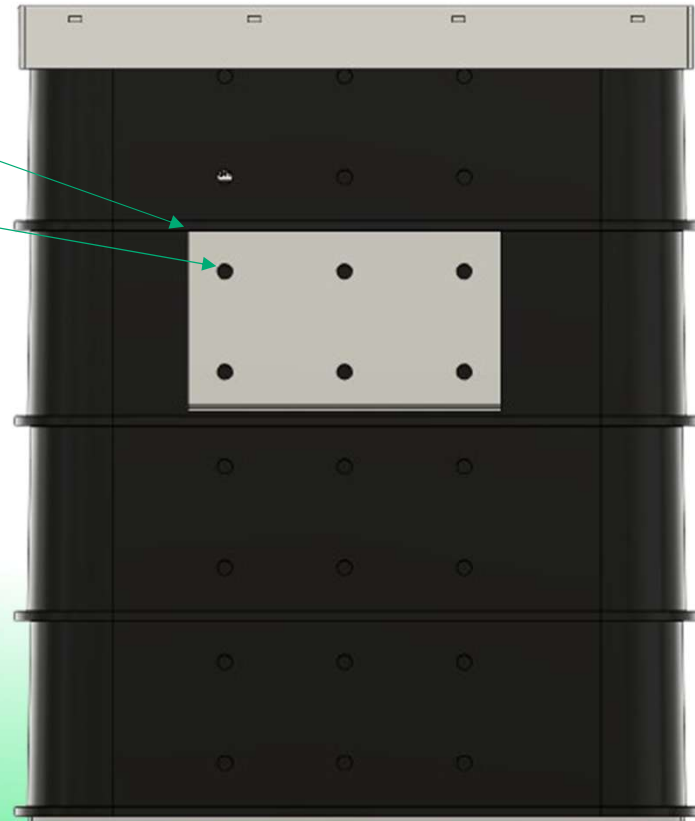

- **Step 3:** Place base frame on foundation
- **Step 4:** Insert carriage bolts, use hammer to lock them into position.

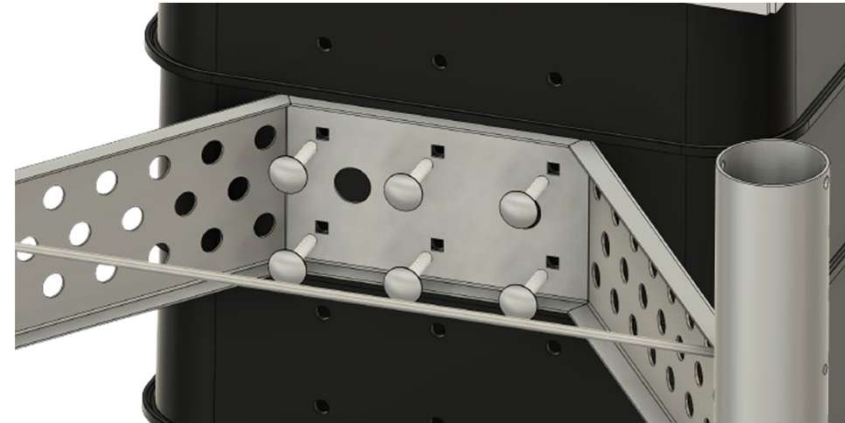


- Step 5: Place drilling templet over bolts
- Step 6: Attach 6 flange nuts and tighten with 10Nm

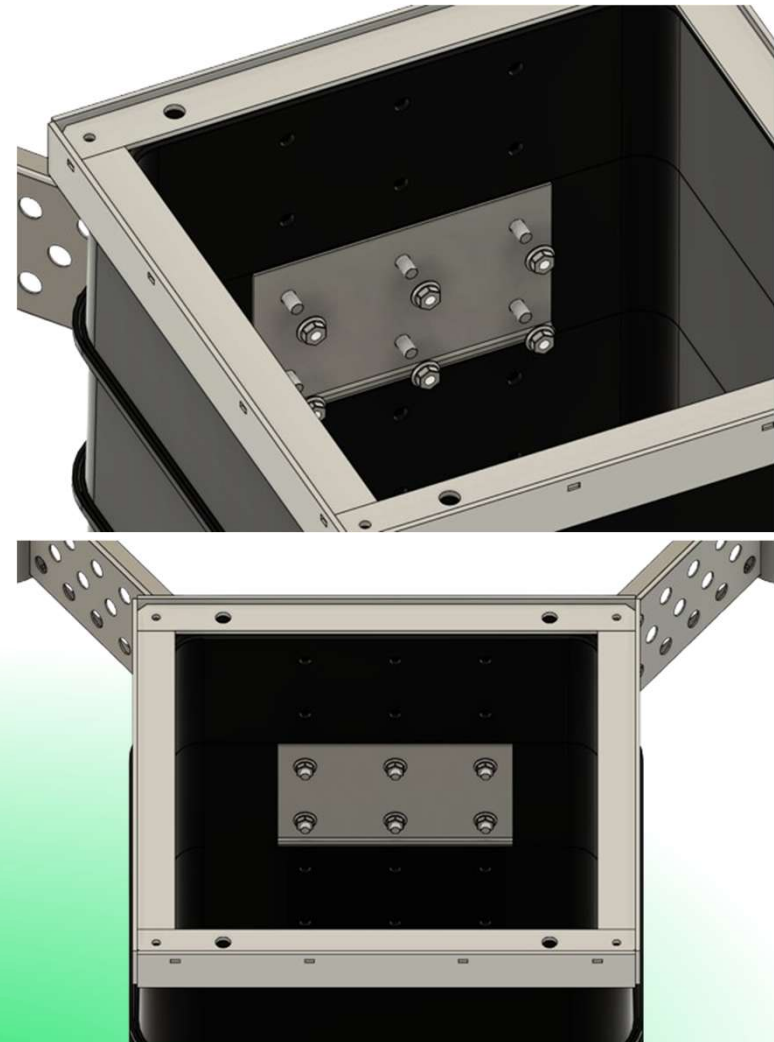

- **Step 7:** Place collision poles in holes
- **Step 8:** Tighten poles by inserting steel rod in holes and turn.



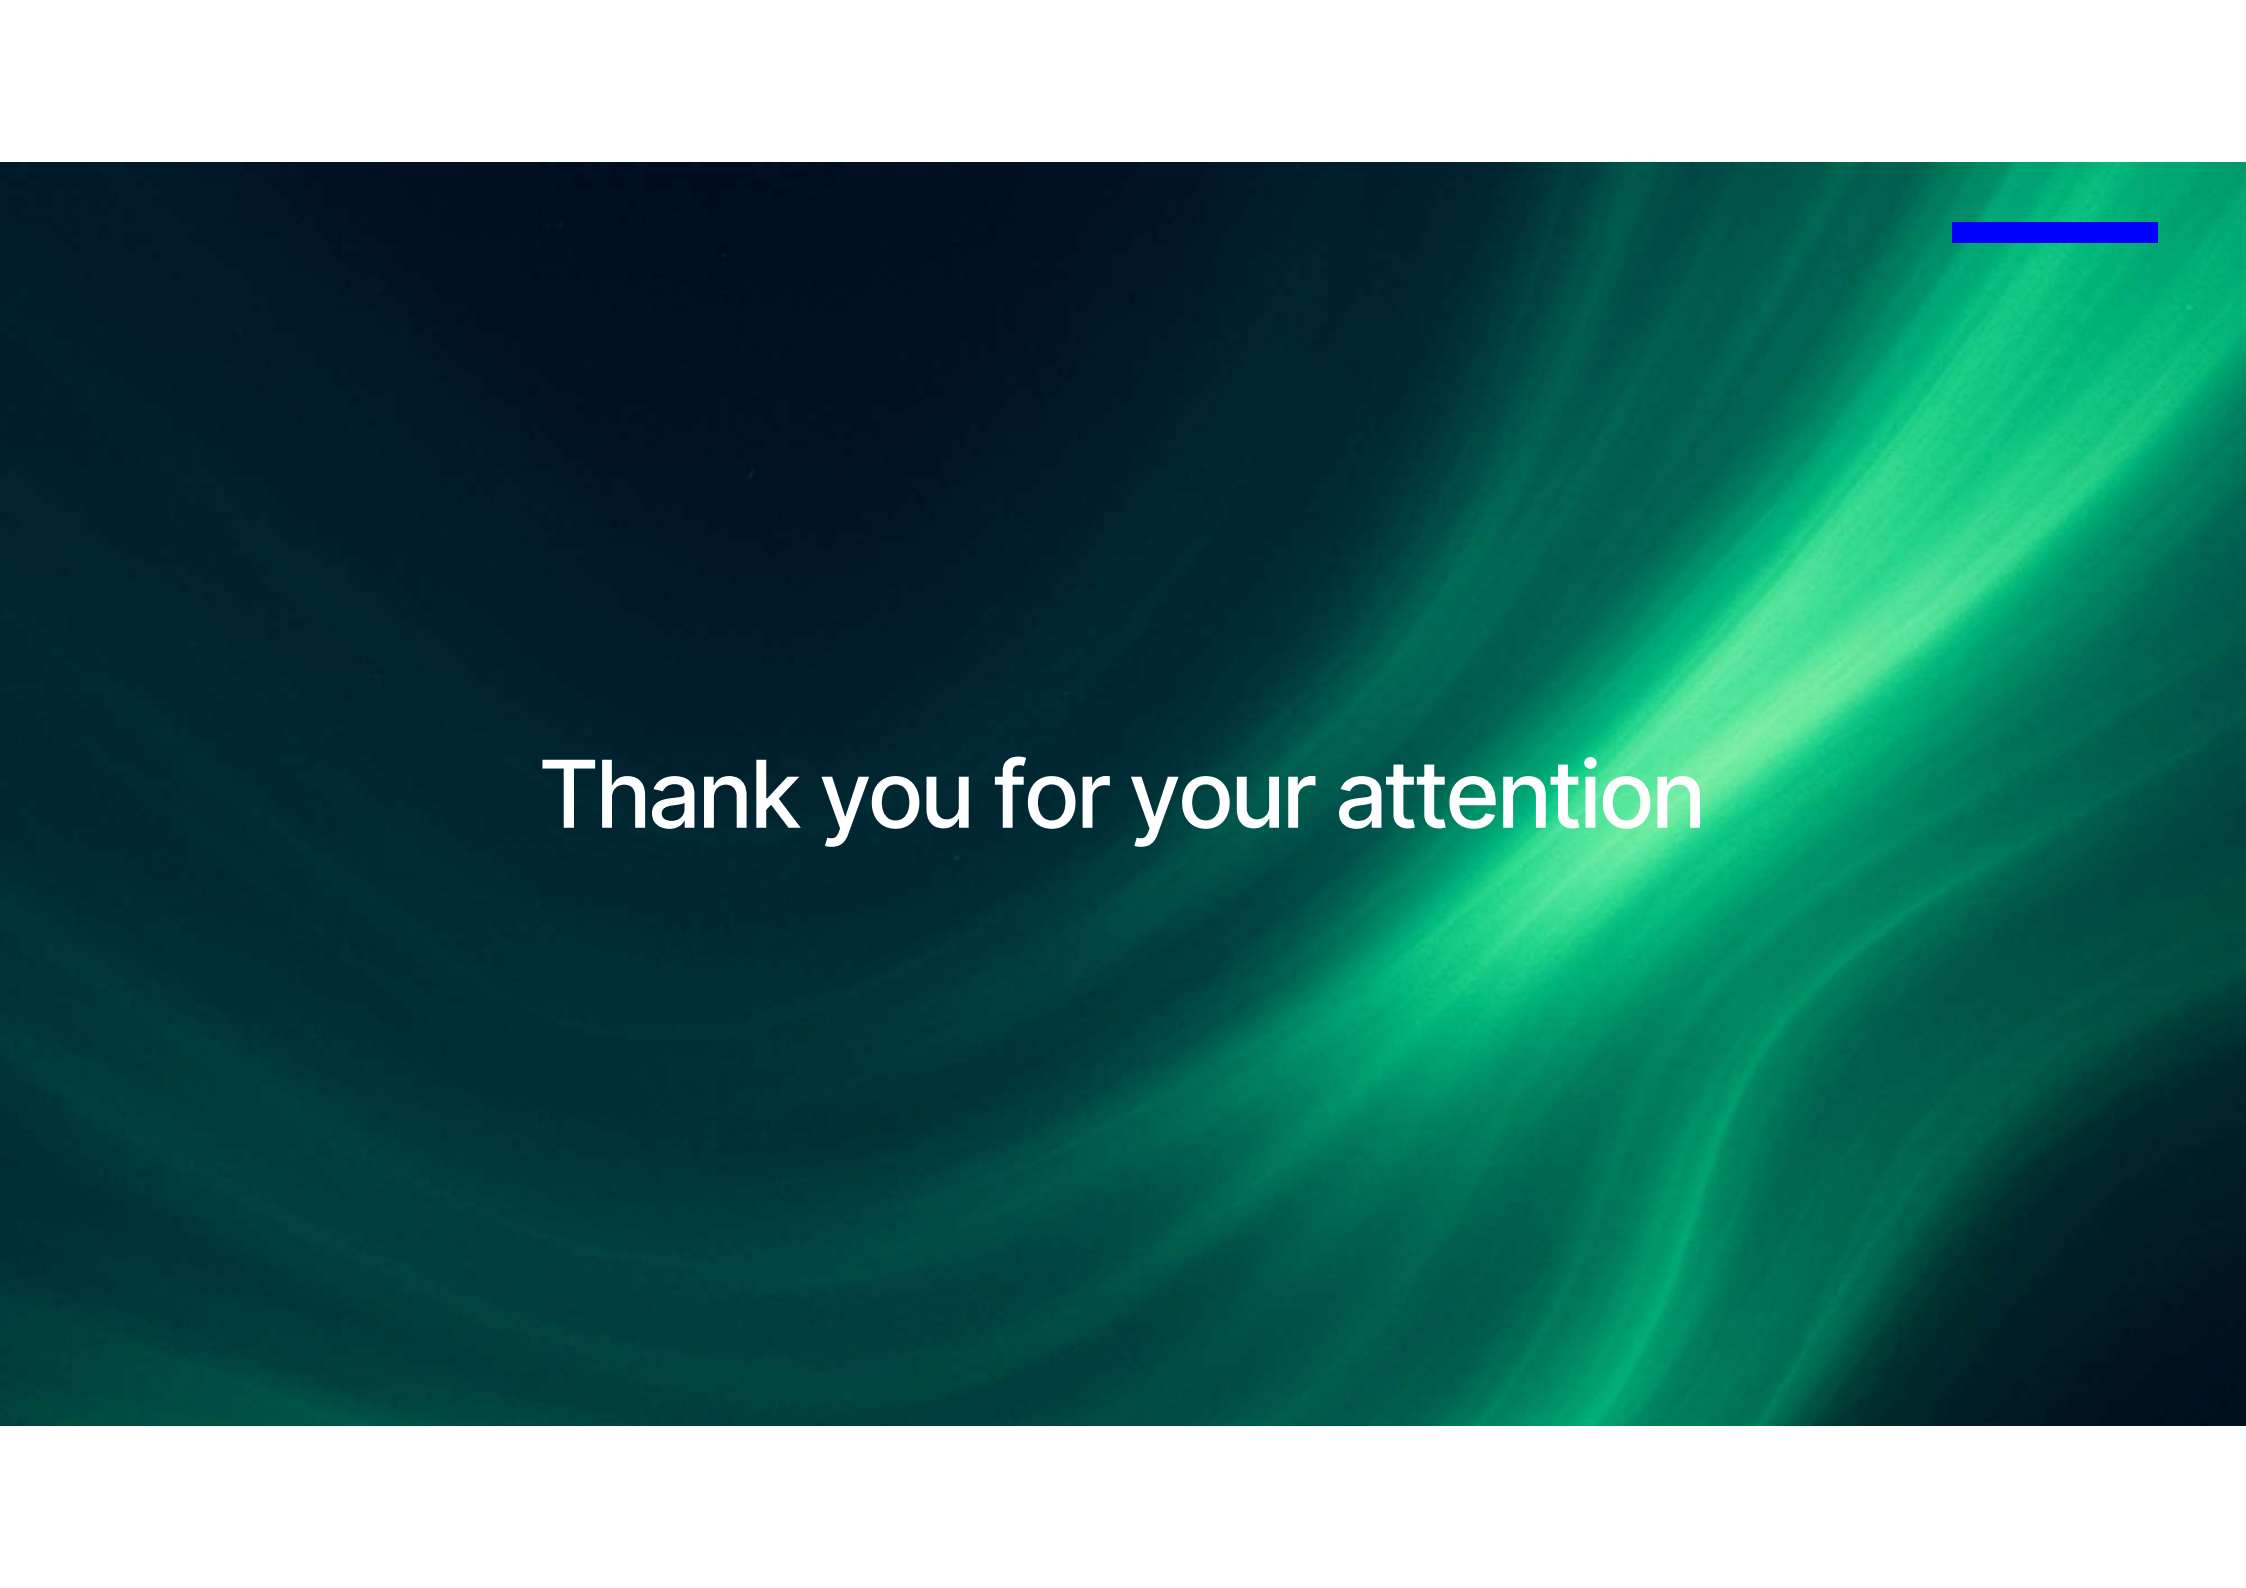

Thank you for your attention